 
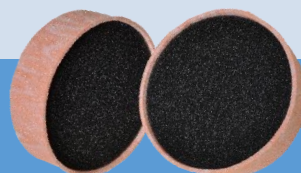 


# PRONOMAR SPARE PARTS

SPARE  
PARTS

Page | 1 (1) Spare parts of Pronomar drying systems

## EXAMPLE PHOTOS OF AIR DRYING SYSTEMS

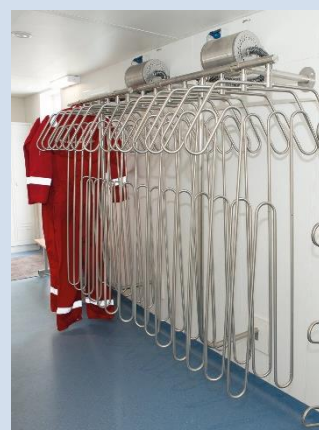


Please change filter regularly for a proper function of the blower, see page 2



You wear it,  
we dry it!

## (2) Listing of OPERATIONAL spare parts

Page | 2

| Picture   | Article Number | SPARE PART description   |
|---|----------------|--|
|  | PX10.02.DF     | <p><b>Set dust filter</b><br/>multi-layer dust filter for blower PX10.FLOW200/300, 1 set of 2 pcs.</p> <p><b>INFORMATION:</b><br/>1 spare set per blower included in the original delivery<br/>equals to: spares for the first 2 years</p> |

## (3) Listing of LONG TERM spare parts & changeable COMPONENTS

| Picture   | Article Number | COMPONENT description   |
|---|----------------|---|
|  | PX10.FLOW300   | <p><b>warm-air blower unit FLOW300</b><br/>digital blower unit, without timer,<br/>NEW: stepless airflow adjustment and tool-free filter change,<br/>temperature approx. 39 ° C (with 20 ° C room temperature), 230 V AC ~ 50/60 Hz, PN ø 1.000 W/h (1.500 W, 8 A device fuse), dimensions: W 30 x D 21 x H 21 cm</p> <p><b>INFORMATION:</b><br/>expected per blower: 1 piece per 4 – 8 operational years (depending on frequency of use)</p> |
|  | PX10.10.TW/TR  | <p><b>10h digital timer</b><br/>wall-mounted or fixed to freestanding or mobile rack (to warm-air blower FLOW200/300),<br/>setting up to 10h (600 min), cables with 13/C14 connections 230 V ~ 50/60 Hz</p> <p>also suitable for cabinets (as built-in timer)</p>   |

## (4) NO COMMISSIONING spares required

All prices are ex works and exclusive of VAT. Prices valid until 28.02.2022.