

PRONOMAR SPARE PARTS


EXAMPLE PHOTOS OF AIR DRYING SYSTEMS





Please change filter regularly for a proper function of the blower, see page 2

You wear it,
we dry it!

(2) Listing of OPERATIONAL spare parts

Picture	Article Number	SPARE PART description
	PX1002-DF	<p>Set dust filter multi-layer dust filter for blower PX10.FLOW200/300, 1 set of 2 pcs.</p> <p>INFORMATION: 1 spare set per blower included in the original delivery equals to: spares for the first 2 years</p>

(3) Listing of LONG TERM spare parts & changeable COMPONENTS

Picture	Article Number	COMPONENT description
	PX10FLOW300	<p>warm-air blower unit FLOW300 digital blower unit, without timer, NEW: stepless airflow adjustment and tool-free filter change, temperature approx. 39 ° C (with 20 ° C room temperature), 230 V AC ~ 50/60 Hz, PN ø 1.000 W/h (1.500 W, 8 A device fuse), dimensions: W 30 x D 21 x H 21 cm</p> <p>INFORMATION: expected per blower: 1 piece per 4 – 8 operational years (depending on frequency of use)</p>
	PX1010-TW / -TR	<p>10h digital timer wall-mounted or fixed to freestanding or mobile rack (to warm-air blower FLOW200/300), setting up to 10h (600 min), cables with 13/C14 connections 230 V ~ 50/60 Hz</p> <p>also suitable for cabinets (as built-in timer)</p>

(4) NO COMMISSIONING spares required